


Helpful Hints for using a BBTI UBS AIR2PC Receive Brick:

- a. Ensure that you have set up your UHF Antenna (for over-the-air Channels 14-69) high enough that it won't be obstructed by people walking in front of it.

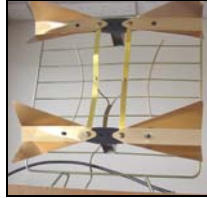

- b. Ensure that the male RF connector on the coaxial cable running from the antenna is connected to the female RF connector on the input to the Bbti AIR2PC PCI card or USB brick.
- c. If using the Bbti USB brick, ensure that you have connected the power supply to the brick and the outlet.



- d. If using the Bbti USB brick, ensure that you have connected the USB cable to the brick and the computer's USB port.



- e. If you wish to request content from the catalog, ensure that you have connected an active network Ethernet cable to the RJ-45 input of computer's Network Interface Card (NIC).
- f. Ensure that you are pointing the UHF antenna towards the proper transmitter's tower.